




TORCH USER MANUAL

Know Your Device

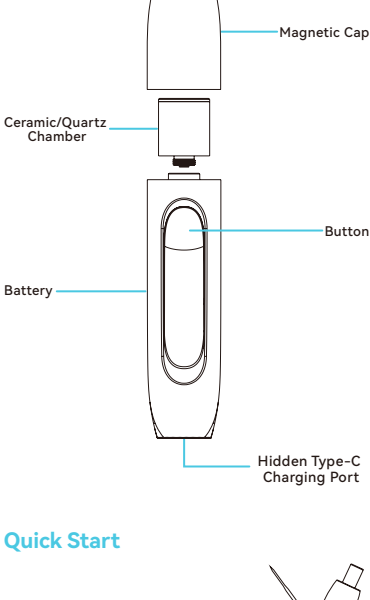

Quick Start


1. Take off the magnetic cap, and load the chamber with concentrates using dab tool.



2. Quickly click the button 5 times to turn on.



3. Click the button 3 times in 2s to set the temperature/voltage you prefer.

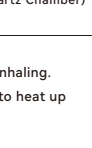

Temp Levels	450°F	500°F	550°F	(For Ceramic Chamber)
	●	●	●	
Voltage Levels	3.0V	3.5V	4.0V	(For Quartz Chamber)

4. Press and hold the button down while inhaling. Allow several seconds for the chamber to heat up before inhaling.

Auto-heat Mode

- Auto-heat mode provides 15/30 seconds of continuous heating. Double click the button to engage the mode. For ceramic heating chamber, the duration of auto-heat mode is 30 seconds; while for quartz heating chamber, it is 15 seconds. The device will shut off automatically when the time is out.
- One more button-click during the mode will exit the mode.

Indicator Codes

- **Turn On/off:** 5 Light flashes. Light color is based on current battery life
- **Coil Connected:** Light solid for 2s. Light color is based on current temp/voltage level.
- **Switching Heat Setting:** Light solid for 2s. Light color is based on current temp/voltage level.
- **Working:** Light breathes in color of temp/voltage level.
- **Vaping Overtime (15s/30s):** 5 red light flashes
- **Charging:** Light breathes in color of current battery life
- **Fully Charged:** Light off
- **Short Circuit:** 4 white light flashes
- **Open Circuit:** 3 white light flashes
- **Low Voltage:** 10 red light flashes

Cleaning

Ceramic Chamber: Clean it with q-tip dipped in isopropyl alcohol, or soak it in isopropyl alcohol. Make sure to dry it completely before using.

Quartz Chamber: Soak it in isopropyl alcohol. Make sure to dry it completely before using.

Cap: Disassemble the cap, soak all the parts except sealing o-ring in isopropyl alcohol.

Warning

- The device is **ONLY** intended for use with concentrates.
- Do **NOT** use the device while charging.
- Do **NOT** touch the heating chamber when using or right after using. Allow several minutes for the chamber to cool down after using.
- Clean the device regularly.
- Do **NOT** overload the chamber.
- Do **NOT** dry fire the chamber consecutively.
- Keep the device away from any environment with high temperature, high humidity, flammable or combustible materials, strong acids, water or other liquid.
- Keep away from any person under legal smoking age, and pets.
- Improper use, disassembly, or modifications to the device voids the warranty and could cause damage or physical harm.

Disclaimer

RELEAFY products are not intended for persons who are not in legal age according to the state and/or federal law, not for non-smokers, children, pregnant women and breast-feeding women, and not for persons with or at risk of diseases like heart disease, high blood pressure, diabetes, mental disease, etc.

RELEAFY products are not intended to diagnose, treat, cure, or prevent any disease or medical condition. If you are pregnant, nursing, taking medication for a medical condition, or suspect you have a medical condition, please consult your physician before using any RELEAFY product.

Warranty Terms

RELEAFY provides repairs or replacements to the original purchase of RELEAFY products under warranty pursuant to the following terms and conditions:

1. This warranty provides free repairs or replacements for defective RELEAFY-branded battery parts within 180 days from the date of purchase.
2. The following circumstances are **NOT** covered:
 - The warranty card or the original receipt of purchase are not provided;
 - Any damage caused by improper operation or unauthorized maintenance and repair;
 - Merchandise failure or damage caused by use with non-RELEAFY branded components or by repairs carried by third parties;
 - Consumable items and attachments (including but not limited to: mouthpiece, heating coil or chamber) are not covered, and can only be replaced if they are not working out of the box.
3. In no event will RELEAFY and RELEAFY distributors be liable for any **CONSEQUENTIAL** or **INCIDENTIAL** damage arising from the use of the product, nor for injury to any person, or any misuse of the product or batteries.

RELEAFY reserves the right of final decision in all warranty cases. RELEAFY may interpret and revise the content of the warranty terms. For more information, technical support and customer service, reach out at support@releafy.com or visit our website www.releafy.com.