RELEAFY

## **FLYOVER** JSER MANUAL












### Capacity: 530mAh Voltages: 2.0V-2.6V-3.2V-3.8V

Charging Tim Cartridge Compatibility:

Diameter ≤ 12.5mr Resistance ≥ 1.0Ω

Agnetic Adapte

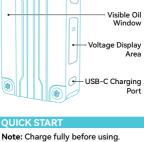

### onto magnetic adapter (included), slide the

cartridge into the FLYOVER battery until the

Twist cartridge clockwise

magnet snaps into place. Click the power butto 5 times to turn on the battery, then click 3 times to circle the

voltages, and select the



voltage you prefer. Voltage Levels 2.0V 2.6V 3.2V 3.8V Hold the button dov and start vaping.



Click twice to activate preheat mo de, the battery will run at 1.8V for 10 seconds. To exit it,



press the button one more time. **INDICATOR CODES** · Cartridge Connected: 1 light solid



## Working: Light breathes in the color of current voltage level Charging / Preheating: Light cycles in the color of current battery life

· Fully Charged: Light off

- · Short Circuit: 4 red light flashe · Open Circuit: 3 white light flashes · Low Voltage: 10 red light flashes
- WARNING
  - vercharge e, which might le Do not o

- to short battery life.
- Do not use the device when charging • Pause using the battery for 3 minutes

- if the device gets too hot when using  $\cdot$  Keep the device away from any
- environment with high temperature,
- high humidity, flammable or

- combustible materials, strong acids,

- Keep away from any person under legal smoking age, and pets.
- water, or other liquid.
- · Improper use, disassembly, or nodifications to the device voids the warranty and could cause
- DISCLAIMER according to the state and/or federal

# damage or physical harm.

- RELEAFY products are not intended for persons who are not of legal age
- law, not for non-smokers, children, pregnant women, and breast-feeding

# women, and not for persons with or at risk of diseases like heart disease,

high blood pressure, diabete disease, etc. RELEAFY products are not intended to diagnose, treat, cure, or prevent any disease or medical condition. If

you are pregnant, nursing, taking medication for a medical condition, or suspect you have a medical

condition, please consult your physician before using any RELEAFY WARRANTY TERMS RELEAFY provides repairs or replacements to the original purcha of RELEAFY products under warranty according to the following terms and conditions:

- 1. This warranty provides free repairs replacements for defective RELEAFY-branded battery parts within 365 days from the date of
  - 2. The following circumstances a NOT covered: The warranty card or the original
  - receipt of purchase are not provided; Any damage caused by improper operation or unauthorized maintenance and repair;
- Merchandise failure or damage caused by use with non-RELEAFY branded components or by repairs carried by third parties; · Consumable items and attachments
- (including but not limited to: mouthpiece, heating coils, or chambers, magnetic adapter, etc.) are not covered, and can only be replaced if they are not working out of the box. 3. In no event will RELEAFY and RELEAFY distributors be liable for

any CONSEQUENTIAL or INCIDENTIAL damage arising from the use of the product, nor for injury to any person, or any misuse of the product or batteries RELEAFY reserves the right of final decision in all warranty cases.

RELEAFY may interpret and revise the content of the warranty terms. For more information, technical support and customer service, reach out at support@releafy.com or visit our website www.releafy.com.









